

HPS-C-SLOT+ Start Up Procedure




EWIKON

HPS-C-SLOT+ Controller

Version 1.0 English

Basic Operation / Advanced Setup / Troubleshooting

- 1** Dry cycle mold 3 – 4 times, apply full tonnage (detects any pinched wires in advance of operation)
- 2** Turn "On" main disconnect
- 3** Select automatic set point
Select Zone 1 , Zone 2 or "both"
Enter automatic set point . Press enter
Repeat for other zones or modules
- 4** Select automatic/manual mode
Select Zone 1 , Zone 2 or "both"
Enter "0" for automatic . Press enter
Repeat for other zones or modules
- 5** Select Zone 1 , Zone 2 or "both"
Press "Up" and "Select" together (Power "On")
Apply power to manifolds first (heat up large mass first)
Repeat for other zones or modules
- 6** Zones will read a low temperature alarm
Zones are close or holding set point when the green temperature holding set point light is illuminated

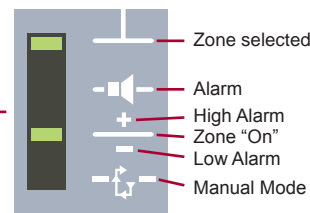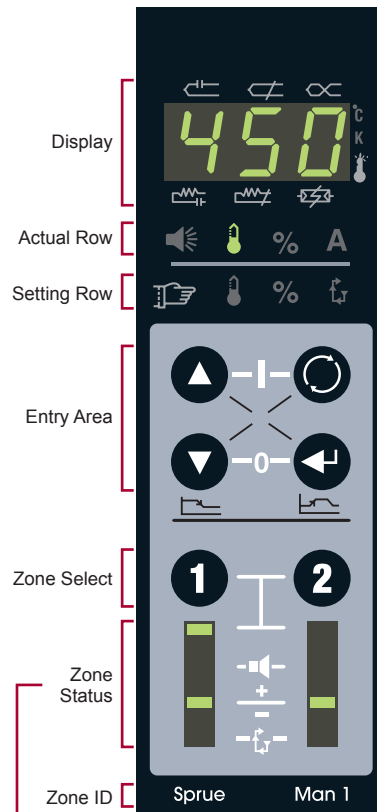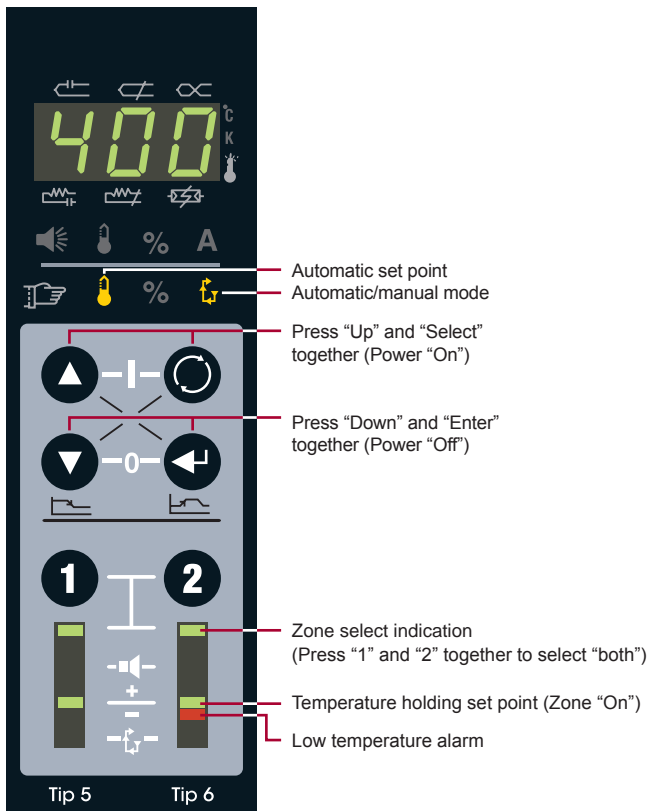


- Thermocouple Open
- Thermocouple Pinched
- Thermocouple Reversed
- Degrees C
- Type K Thermocouple
- Uncontrolled Output
- Open Fuse
- Shorted Heater
- Open Heater
- Alarm Status
- Actual Temperature
- Actual % Output
- Actual Current (Amps)
- Automatic/Manual Mode
- Manual % Output Set Point
- Automatic Set Point
- Select
- Enter
- Increment (Up)
- Decrement (Down)
- Power "On"
- Power "Off"
- Standby
- Boost
- 1** First Zone (Zone 1)
- 2** Second Zone (Zone 2)

EWIKON

EWIKON Heikanalsysteme GmbH
Siegener Strae 35, 35066 Frankenberg
Tel: +49 (0)64 51/50 10 · Fax: +49 (0)64 51/50 12 02
info@ewikon.com · www.ewikon.com

How to Enter a Set Point

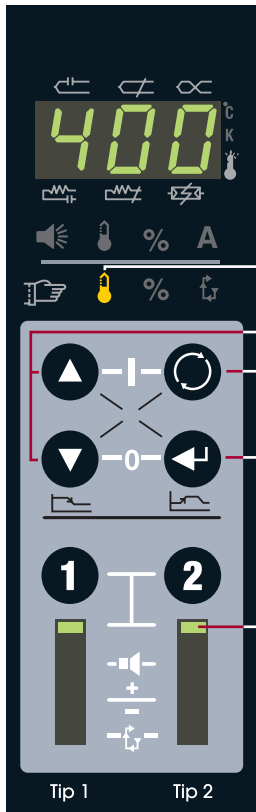

Enter Automatic Temperature Set Point

- 1 Select zone(s) 1, 2 or 1 2
- 2 Select automatic set point
- 3 Enter temperature set point
- 4 Press enter to confirm

Automatic set point

Press "Up" or "Down" to adjust temperature (Press "Up" and "Down" together to change individual digits – 100, 10 or 1)


Select

Enter

Zone select indication (Press "1" and "2" together to select "both")

How to Select Automatic or Manual

- 1 Select zone(s) 1, 2 or 1 2
- 2 Select automatic/manual mode
- 3 Enter "0" for automatic or closed loop control
Enter "1" for manual or open loop control
- 4 Press enter to confirm

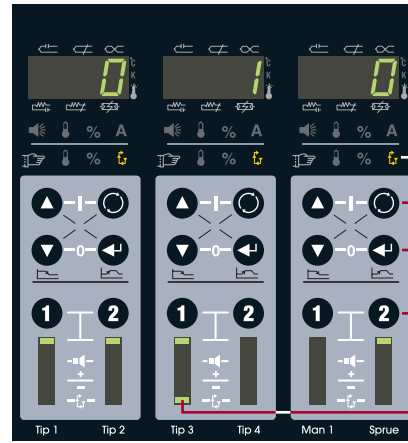

Automatic/Manual mode


Select

Enter

Zone select

Manual mode light
(No light = automatic mode)

How to Turn the Power "On" & "Off"

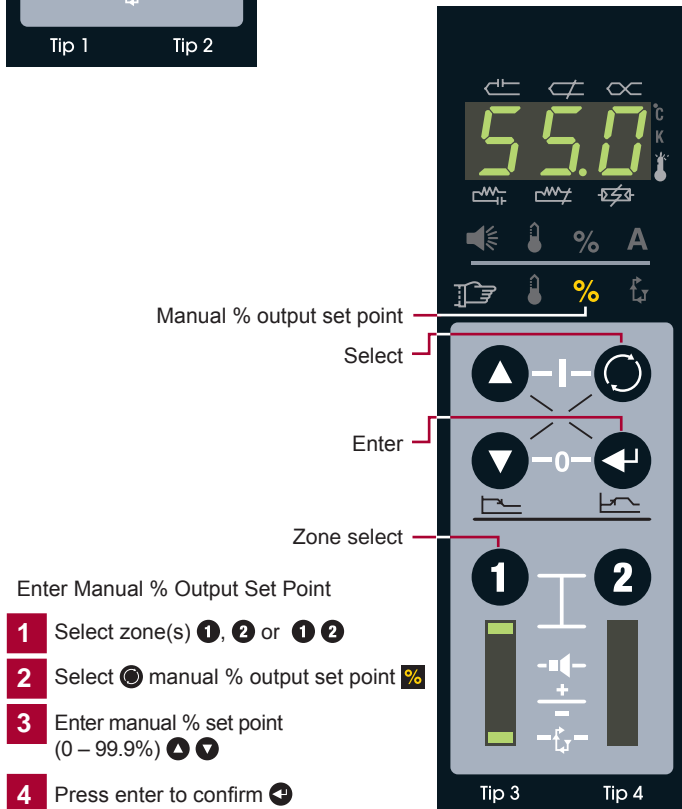

Enter Manual % Output Set Point


- 1 Select zone(s) 1, 2 or 1 2
- 2 Select manual % output set point
- 3 Enter manual % set point (0 – 99.9%)
- 4 Press enter to confirm

Manual % output set point

Select

Enter

Zone select

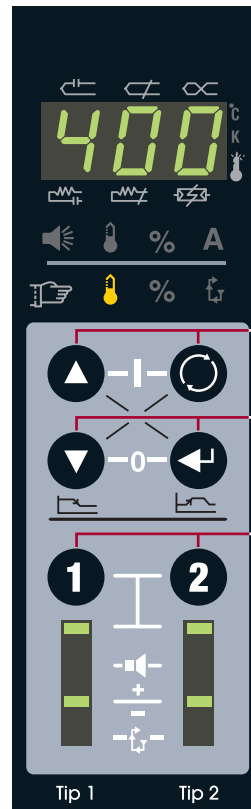

Turn zone(s) "On"

- 1 Select zone(s) 1, 2 or 1 2
- 2 Press "Up" and "Select" together to turn power "On"

Zone(s) "On"

Zone(s) "Off"

Press "1", "2", or "1 & 2" together to select "both"


Turn zone(s) "Off"

- 1 Select zone(s) 1, 2 or 1 2
- 2 Press "Down" and "Enter" together to turn power "Off"

Standard Controller Enclosure Wiring

Assignment is as follows. The actual connector arrangement of HPS-C-SLOT+ controllers may differ.


2 Zone Enclosure

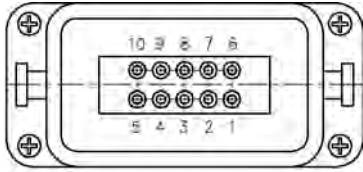

Zone	Load PIN	Temperature sensor PIN
1	1 / 6	5(+) / 10(-)
2	3 / 8	4(+) / 9(-)


Earth conductor wired to housing.

6 Zone Enclosure

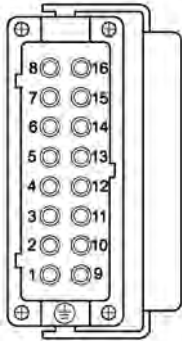

Zone	PIN
1	1 / 9
2	2 / 10
3	3 / 11
4	4 / 12
5	5 / 13
6	6 / 14

Power

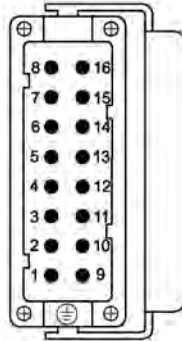

Thermocouple


Zone	PIN
1	1 + / 9 -
2	2 + / 10 -
3	3 + / 11 -
4	4 + / 12 -
5	5 + / 13 -
6	6 + / 14 -

Type J

(-) = White
(+) = Black


Earth conductor wired to housing.

12 Zone Enclosure

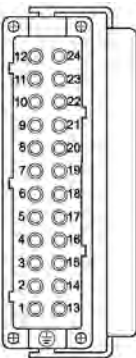

Zone	PIN
1	1 / 13
2	2 / 14
3	3 / 15
4	4 / 16
5	5 / 17
6	6 / 18
7	7 / 19
8	8 / 20
9	9 / 21
10	10 / 22
11	11 / 23
12	12 / 24

Power

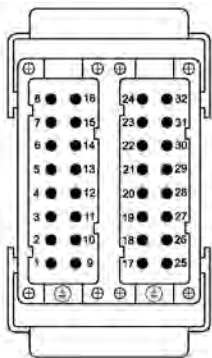

Thermocouple

Zone	PIN
1	1 + / 9 -
2	2 + / 10 -
3	3 + / 11 -
4	4 + / 12 -
5	5 + / 13 -
6	6 + / 14 -
7	7 + / 15 -
8	8 + / 16 -
9	17 + / 25 -
10	18 + / 26 -
11	19 + / 27 -
12	20 + / 28 -

Type J

(-) = White
(+) = Black

Earth conductor wired to housing.

EWIKON


EWIKON Heißkanalsysteme GmbH
Siegener Straße 35, 35066 Frankenberg
Tel: +49 (0)64 51/50 10 · Fax: +49 (0)64 51/50 12 02
info@ewikon.com · www.ewikon.com

Optional Network Module Wiring

HA4 Input/Output Connector

Standby input

- 24 or 120 VAC/VDC input to activate
- All zones go to standby mode
- If standby set point is "1", module will be inhibited
- Configure in Advanced Setup
- Male insert on enclosure

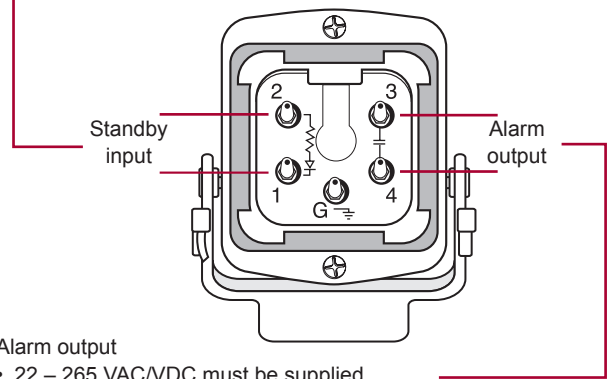


Alarm output

- 22 – 265 VAC/VDC must be supplied
- Normally open contact
- Contact is closed when any zone is in alarm for 16 seconds
- Fused at 5 amps

Remote Computer & Enclosure Link Connections




- Female DB25 enclosure link connector on network module enclosure
- Male DB25 enclosure link connector on stacked enclosure
- Connect two enclosures to one network module
- Share input, output and communications



- Female DB9 remote computer connector on enclosure
- Complimentary monitoring software including Gammavision, Mold Monitor, Mold Doctor and Field Calibrator

The HPS-C-SLOT+ controller is shipped to the customer so that no setup work is required for basic operation. Set points in automatic and manual may be entered and the zone will be controlled by turning "On" the power. Many customers require advanced features to satisfy their operation. This page will describe the basics of "Advanced Setup". Please note that security level codes are not standard. To place security on the HPS-C-SLOT+ controller you must activate security by selecting your own personalized security codes (network module required).

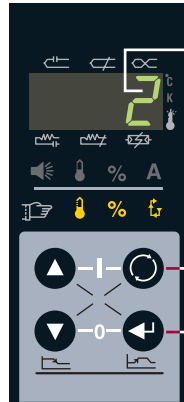

Advanced setup number

Press "Select" and "Enter" together



Advanced setup setting

Press "Select" and "Enter" together again

Toggle between number and setting




Press "Select" to exit advanced setup

Advanced Setup Guide - Level 2 Security to Change

#	Limit (default)	Explanation	Set individually by zone
(0)	0 – 4 (0)	Power Priority™. 0 = (off). 1 – 4 = increased smoothing of power output. A = Power Priority™ is active (setup number)	
(1)	0 – 999 (0)	*Reset advanced setup to default values – enter 321; press enter to confirm	
(2)	0 – 100 °F/55 °C (20 °F/11 °C)	Temperature deviation alarm set point (individual) Actual temperature activates individual zone alarm at this amount +/- set point	
(3)	-31 to 27 (0)	Control algorithm adjustment (individual). 0 = auto selection. To view actual tuning value select code 4 Manual Selections: 10 to 17 fast tuning with increasing lag. 20 to 27 slow tuning with increasing lag -17 to -10 fast manifold tuning with increasing lag. -27 to -20 very fast tuning with increasing lag. -30 and -31 ultra fast low mass tuning. P = auto selection tune performed (setup number)	
(4)	-31 to 27 (none)	Algorithm set point (view only). View auto tuning selection or manual tuning value	
(5)	0 – 932 °F/500 °C (220 °F/104 °C)	Standby set point (individual). When standby is activated, all automatic zones selected will control to this set point Entering "1" will inhibit the module (both zones), when activated the relays will open, turning "off" the module power	
(6)	0 to 54.0 minutes (5.0)	T/C pinched detection time (individual) 98+% output, 20 °F/11 °C in 5 minutes – default. Change alarm timer amount. 0 = disabled	
(7)	32 – 999 °F/0 – 537 °C (779 °F/415 °C)	*Critical over temperature alarm. To clear the alarm, select alarm status and press enter If this temperature is exceeded for 8 seconds both zones turn "Off". Max. 999 °F (537 °C) = disabled	
(8)	32 – 932 °F/0 – 500 °C (752 °F/400 °C)	*Automatic set point limit. The maximum set point an operator can enter in automatic on both zones	
(9)	0 – 99.9% (99.9%)	*Manual set point limit. The maximum set point an operator can enter in manual on both zones	
(10)	0 – 999 °F/537 °C (100 °F/55 °C)	*Boost limit. The maximum amount of degrees an operator can raise or lower the zone(s) during a boost	
(11)	+/-99 °F/55 °C (36 °F/20 °C)	*Initial boost set point. Amount of degrees added to automatic set point, module adjustable within the boost limit	
(12)	0-999 seconds (120)	*Boost time set point. The amount of time boost is active	
(13)	0 or 1 (0)	*Degree F or C selection. 0 = "degree F"; 1 = "degree C"	
(14)	0 or 1 (0)	*Type J or K thermocouple selection. 0 = "type J"; 1 = "type K"	
(15)	0 or 1 (0)	*Zone power status on power up. 0 = all zones turned "Off"; 1= zones "On" when shut down last, stay "On"	
†(16)	0 or 1 (0)	*Enable slaved power-up. 0 = "Off"; 1 = "On". All zones heat within 20 °F/11 °C of one another until set point	
†(17)	0 – 999 (none)	*Security code level 1. You must be in level 2 to change. Refresh procedure available, call EWIKON	
†(18)	0 – 999 (none)	*Security code level 2. You must be in level 2 to change. Refresh procedure available, call EWIKON	
(19)	- - -	Output module controller software version/revision number (display only), select zone, version/revision displayed	
(20)	- - -	Temperature controller software version/revision number (display only), select zone, version/revision displayed	
(21)	0 (0)	LED test. To activate enter 0. Turns "On" all LED's for troubleshooting	
†(22)	000 – 999 (level 2)	Security level indicated. 0 = lockout; 1 = operator; 2 = supervisor. 0 - enter, drops one level Elevate one security level at a time with your customized code	
†	Network module required	*Network module distribution or value applies to both zones on the module	

Why Standby? How to Activate

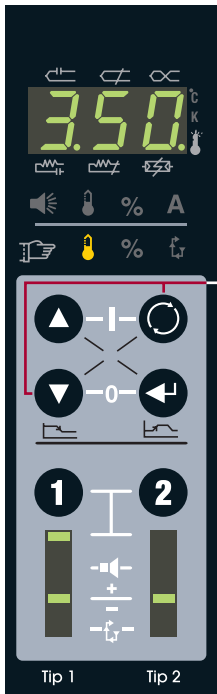

Some processors like to maintain a lower set point on command for all zones while they are working on something.

Select zone(s) to put into standby **1**, **2** or **1** **2**. Press "down" **▼** and "select" **⊙** together

The selected zone(s) will go to the standby temperature
Hotter zones will cool to the standby temperature

Colder zones will heat to the standby temperature

Automatic zones = 220 °F/104 °C (default)

Manual zones = half of the manual set point

The outer decimal points will flash during standby

To cancel standby, press "down" **▼** and "select" **⊙** together



Tip 1 Tip 2

The original standby source must be cancelled to clear standby. Please reference alternate standby inputs, shown to the right

Alternate Standby Inputs




Standby switch on enclosure (if available) all zones go to standby mode

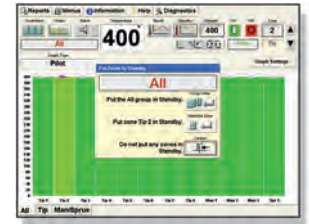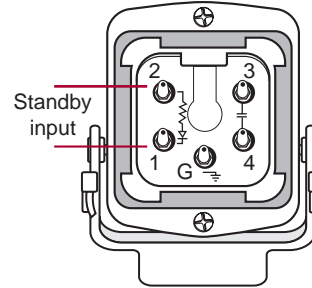

- 24 or 120 VAC/DVC input to activate
- All zones go to standby mode (network module required)

- Standby button from external software
- Selected zone(s) go to standby mode (network module required)

Why Boost? How to Boost

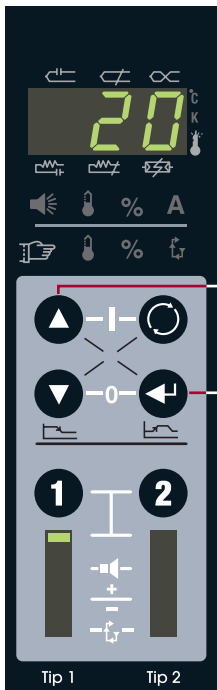

Boost temporarily raises a zone(s) temperature (typically tips) to clear a cold slug on start up.

Select zone(s) to boost **1**, **2** or **1** **2**
Press "up" **▲** and "enter" **↵** together

Enter boost amount **▲** **▼**. Press enter **↵**


Zone(s) will boost 36 °F/20 °C (default) for 120 seconds (default)

The 7 segment display will flash during boost

To cancel boost, press "up" **▲** and "enter" **↵** together

Tip 1 Tip 2

How to View All Zones Quickly

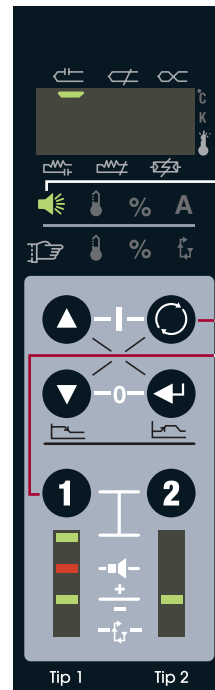


Alarm status


Select

Zone select

Tip 1 Tip 2

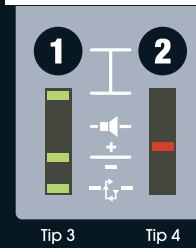

Tip 3 Tip 4

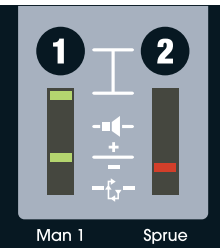

Man 1 Sprue

- 1 Tip 1 – in alarm, select zone **1**
Select **⊙** alarm status **🔊**
Thermocouple open
- 2 Tip 2 – normal operation
Zone is on, in automatic and at or near set point
- 3 Tip 3 – in manual, Thermocouple may be open
Module applying a constant % output to the heater
- 4 Tip 4 – in automatic, High temperature alarm (+20 °F/11 °C default)
- 5 Man 1 – normal operation
- 6 Sprue – low alarm

Basic Troubleshooting


Thermocouple pinched - The T/C is pinched or the controller thinks it is pinched. (Default: $\geq 98\%$ output, must see $+20\text{ }^{\circ}\text{F}/11\text{ }^{\circ}\text{C}$ in 5 minutes). True pinch - the T/C is sensing the temperature further away from the heat source than intended. Without alarm, temperature reads low, controller applies power, runaway heat.

Thermocouple (T/C) open - the T/C connection is broken, follow general troubleshooting.

Open heater - The heater connection is broken, follow general troubleshooting.

Shorted heater - The heater is shorted or exceeds the maximum rating of the module, follow general troubleshooting.

Open fuse - fuse on module bad. Turn "Off" main disconnect. Remove top cover, locate module, check all fuses (4 per module, 2 per zone).

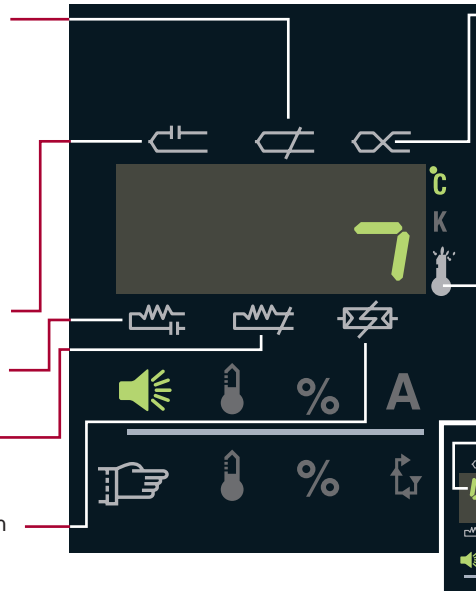

Thermocouple reversed - The T/C connection is wired + to - at some point. Visually inspect each connection. Make sure that only wires of the same colour are connected.


Critical over temperature - The temperature of a zone exceeded the alarm limit. (Default: $779\text{ }^{\circ}\text{F}/415\text{ }^{\circ}\text{C}$). Both zones on the module shut "off" automatically. To clear the alarm, select alarm status and press enter. Noted by vertical indicator segment.

Uncontrolled output - The module has an unregulated output. Both zones on the module shut "off" automatically. To clear the alarm, select alarm status and press enter. Noted by vertical and horizontal indicator segment (shown).

Over-Voltage - The module line voltage exceeded 280 VAC for 1 minute (informational only).

General Troubleshooting – Turn "Off" Main Disconnect

- 1** Check resistance from pin to pin, at the mold. T/C should read 3 – 50 ohms at room temperature. Heater should read greater than 16 ohms. If there is no continuity (open line) = broken connection, open heater or open T/C.
- 2** Check resistance from pin to ground, at the mold. Heaters only – no continuity (open line) = good. Some resistance is bad, heater shorted.
- 3** Reattach the cable to the mold, detach the cable from the controller. Check resistance from pin to pin on the cable. T/C should read 3 – 50 ohms at room temperature. Heater should read greater than 16 ohms. If there is no continuity (open line) = broken connection, open heater or open T/C. The connection is broken in the cable set or the connectors/pins are not making contact.
- 4** Reattach the cable to the mold, detach the cable from the controller. Check resistance from pin to ground on the cable. Heaters only – no continuity (open line) = good. Some resistance is bad, heater shorted. The wires are either shorted in the cable set or the connectors are shorted to ground.
- 5** At this point if everything is fine, the problem is in the controller. (1) turn "Off" main disconnect, (2) locate problem module, (3) check fuses on module, (4) swap bad module into a known good location, (5) turn "On" main disconnect, (6) test the zone. If the problem follows the module = bad module. If the alarm stays with the original zone, the problem is between the module and the connectors on the rear of the enclosure.
- 6** If the problem is not explained, or you need spare parts please contact:

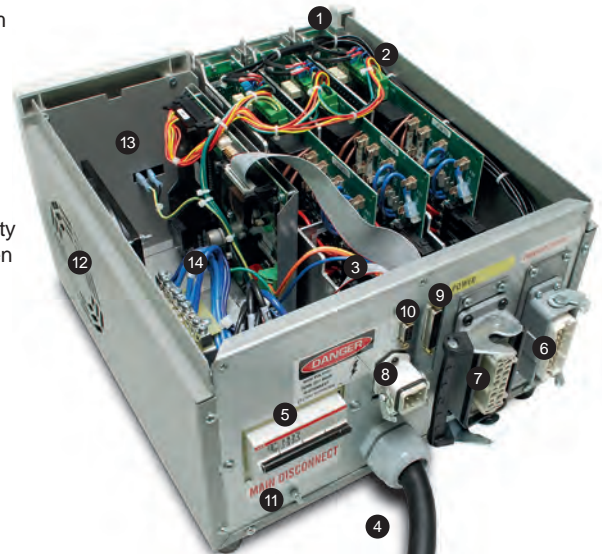

- | | |
|---|---|
| 1 Output module | 7 Power output connector |
| 2 Module thermocouple/communications cable | 8 Auxiliary input/output connector |
| 3 Module power input/output connector (base of module) | 9 Enclosure link connector |
| 4 Input power cable | 10 Communications port |
| 5 Main disconnect (circuit breaker) | 11 Ground stud |
| 6 Thermocouple input connector | 12 Fan |
| | 13 System wide standby switch (on front) |
| | 14 Capacitors |

EWIKON

EWIKON Heißkanalsysteme GmbH
 Siegener Straße 35, 35066 Frankenberg
 Tel: +49 (0)64 51/50 10 · Fax: +49 (0)64 51/50 12 02
 info@ewikon.com · www.ewikon.com